



Standard BSA Axle Holes/Slots

HUMVEE



5.75" L x 1.75" W

TOP



Derby Monkey Garage

SIDE

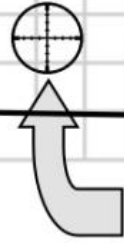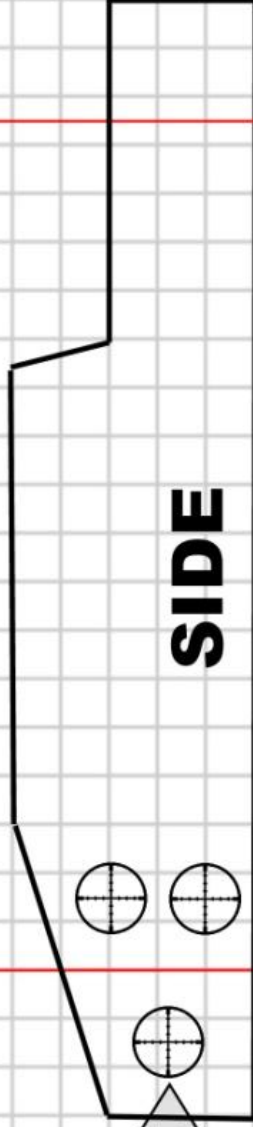

3/8" HOLES
FOR WEIGHTS

AXLE LINE

AXLE LINE

TO SCALE: 1 SQUARE = 1/4"

WWW.DERBYMONKEY.COM

Tools & Supplies Needed

- Band Saw or Coping Saw
- Electric hand drill or press
- 3/8" Drill Bit for weight holes
- #44 Drill Bit for axle holes
- Sharp Pointed Object (punch)
- 3/8" Tungsten Cylinders or...
- 3/8" Lead wire for weight
- Body Putty / Wood Filler
- Safety Glasses
- Hearing Protection
- Scissors
- Markers
- Sandpaper
- Paint, Accessories and Decals

RECOMMENDED ACCESSORIES:

Easy-to-Apply Camo Body Skin – [CLICK HERE](#)

Pinewood Derby Wheels – [CLIC HERE](#)

Lead Wire for weight – [CLICK HERE](#)

Monkey Dust Premium Graphite – [CLICK HERE](#)