
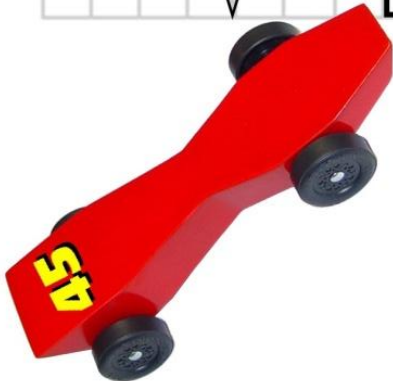


RECOMMENDED ACCESSORIES:

- Cool Decals – [CLICK HERE](#) Accessory Parts – [CLICK HERE](#) Pinewood Derby Wheels – [CLICK HERE](#)
 Monkey Dust Graphite – [CLICK HERE](#) Testors One-Coat Spray Paint – [CLICK HERE](#) Pro Axle Guide – [CLICK HERE](#)
 ProMax Axle Polishing Kit – [CLICK HERE](#) Lead Wire – [CLICK HERE](#) Tungsten Cylinders – [CLICK HERE](#)

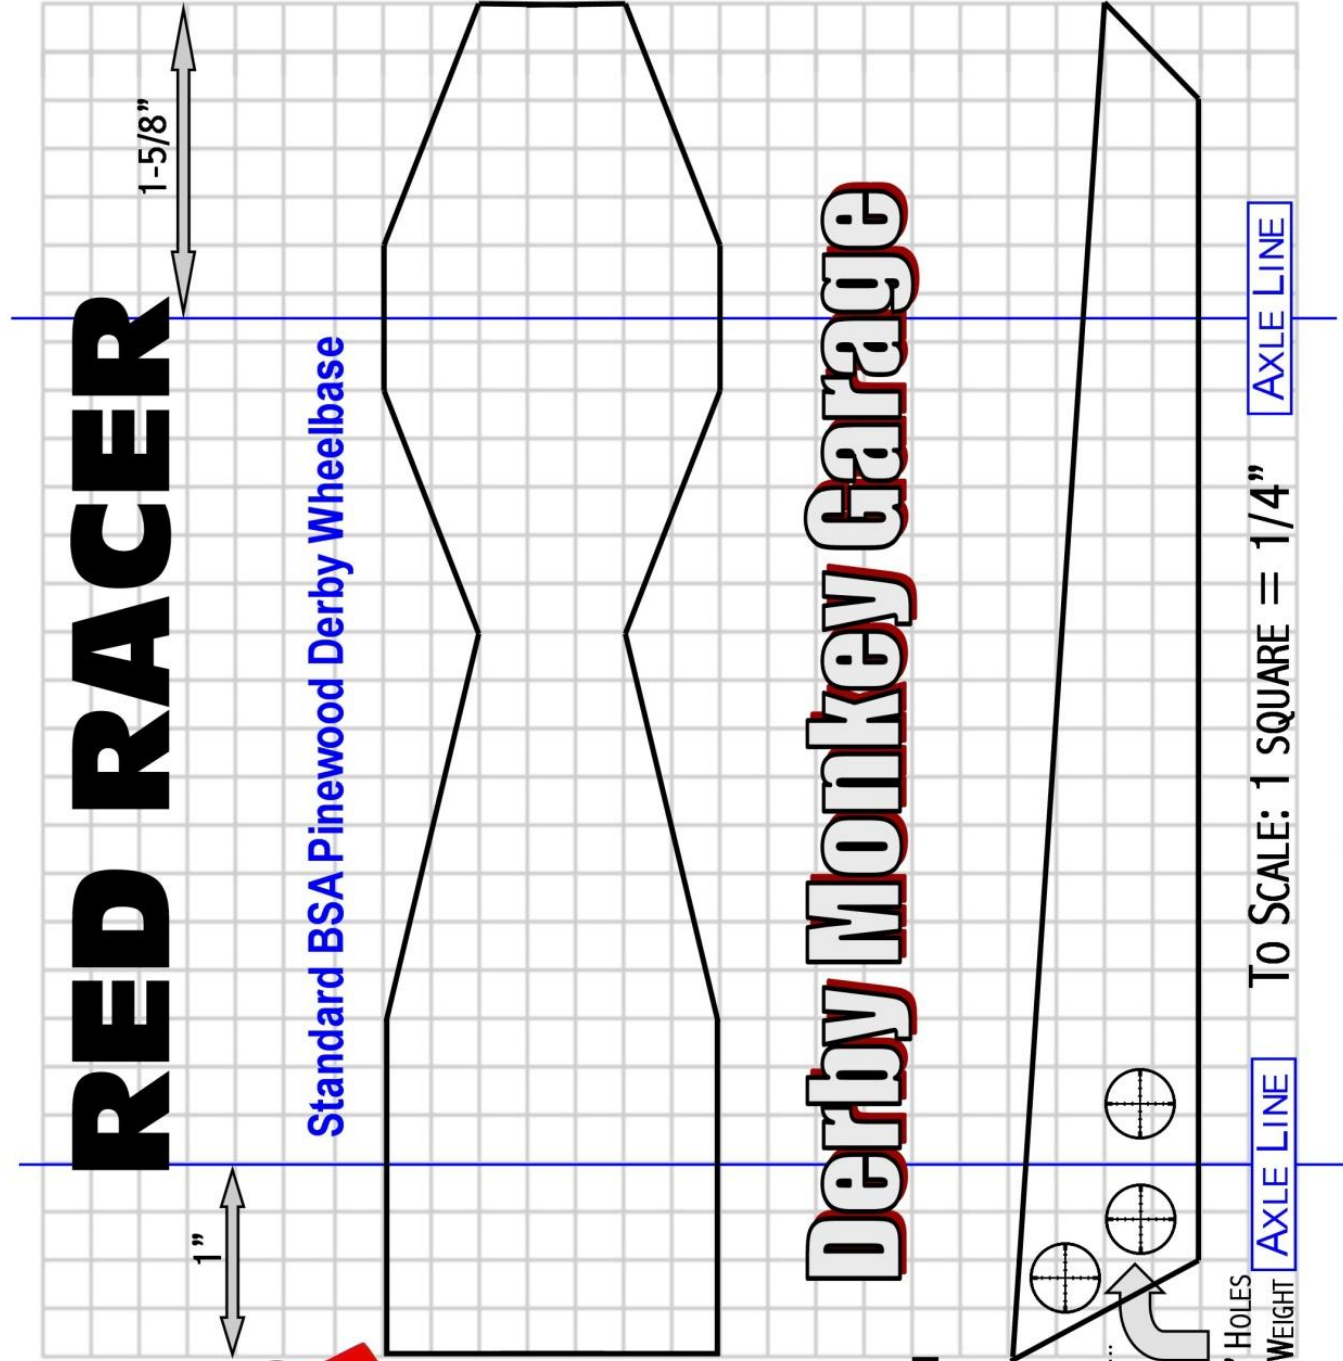

Tools & Supplies Needed

- Band Saw or Coping Saw
- Electric hand drill or press
- 3/8" Drill Bit
- #44 Drill Bit
- 3/8" Tungsten Cylinders or...
- 3/8" Lead wire for weight
- Body Putty / Wood Filler
- Safety Glasses
- Hearing Protection
- Scissors
- Markers
- Sandpaper
- Paint

3/8" HOLES
FOR WEIGHT

AXLE LINE

TO SCALE: 1 SQUARE = 1/4"

AXLE LINE

WWW.DERBYMONKEYGARAGE.COM

All works in these plans including text and graphics are sole property of Derby Monkey Garage. Reproduction and/or redistribution are prohibited.