


RECOMMENDED ACCESSORIES:

Skelton Driver – [CLICK HERE](#)

Pinewood Derby Wheels – [CLIC HERE](#)

Testors One-Coat Spray Paint – [CLICK HERE](#)

Monkey Dust Premium Graphite – [CLICK HERE](#)

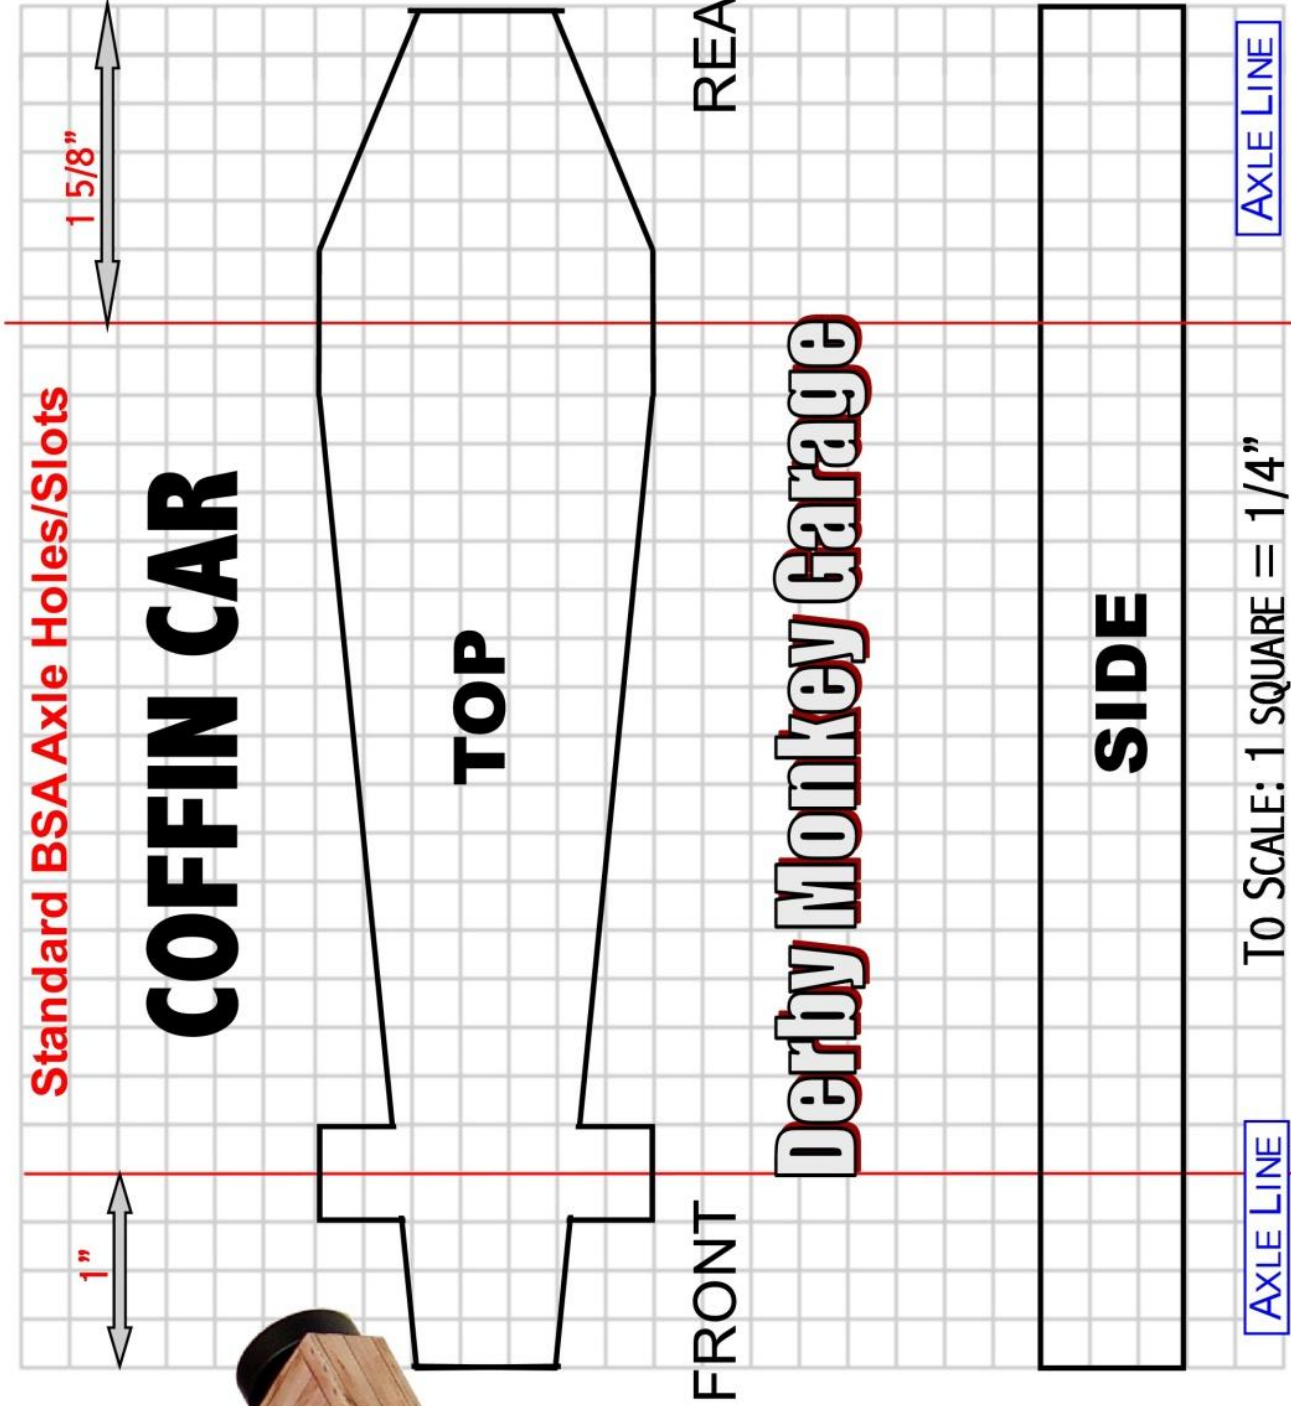

WWW.DERBYMONKEY.COM

Tools & Supplies Needed

- Band Saw or Coping Saw
- Electric hand drill or press
- 3/8" Drill Bit for weight holes
- #44 Drill Bit for axle holes
- 3/8" Tungsten Cylinders or...
- 3/8" Lead wire for weight
- Body Putty / Wood Filler
- Safety Glasses
- Hearing Protection
- Scissors
- Markers
- Sandpaper
- Paint, Accessories and Decals